

INSTALLATION GUIDE





SKU: **BA-FRN**

FIRE RATED UNINSULATED ACCESS DOOR

■ WALL INSTALLATION PROCEDURE

- 1. Opening dimensions should be 1/4" larger than catalogue size of door; i.e., for a 12" x 12" door, opening should be 12 1/4" x 12 1/4" once drywall boards are installed.
- 2. Place door in position in the opening and mark location of attachments on studding, using holes in latch and hinge sides of door frame as marking quides.
- Remove door, and drill 5/32" holes through studding at points marked for attachment holes.
- 4. Place door in position and attach with #10 drywall screws.
- 5. Check door panel for freedom of movement. If it binds, shim to remove any racking of frame at attachments to studding.
- 6. In order to ensure that the door is self-closing it must be automatically latch and lock when released from at least 60 degrees of openness.
- 7. Open the spring kit provided in the box and install one single spring between frame (hinge side) and the hook on the back of the door panel
- 8. When mounting access panels with galvanized beaded frame (instead of 1" steel trim), once beaded frame is fastened use drywall cement and tape drywall to cover and conceal the flange.

