


Installation information

Aluminum frame, with drywall inlay, for drywall and ceilings - BA-F1 / BA-F2 AK - glued panel

Tools Required



screwdriver

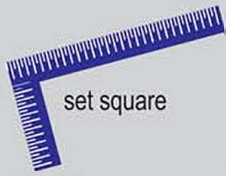

set square



Tape Measure



Level




Drywall saw

or Utility knife

Drywall insert with screws on sizes larger than 24" x 24" (610 mm x 610 mm).




Framing Guide

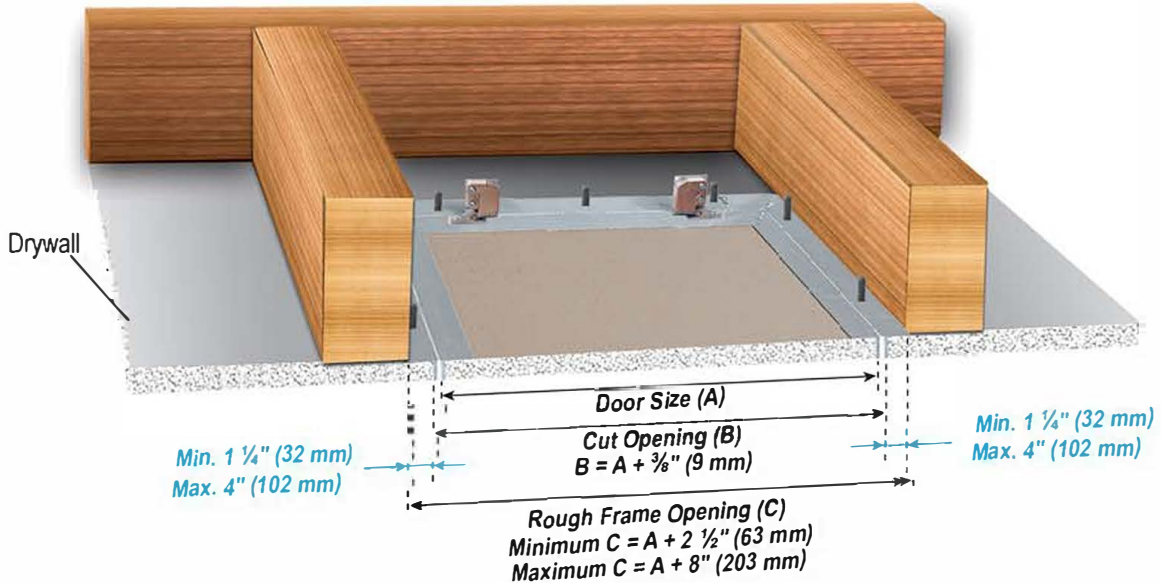

- 1 Door Size (A):** This is the clear opening of the panel when the door leaf is removed
- 2 Cut Opening (B)** is the Door Size (A) + 3/8" (9 mm). This is the size of the opening you will cut into the drywall
- 3 Rough Frame Opening (C)** is the measurement from inside stud to inside stud of the surrounding framework. Minimum Rough Frame Opening (C) is Door Size (A) + 2 1/2" (63 mm)

Standard ceiling and walls -stud or joists at 16" (406 mm) center

The illustration shows the maximum size of the frame that fits between joists or studs on standard center.

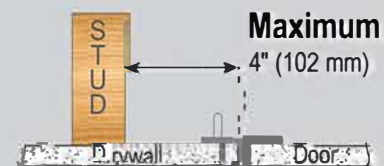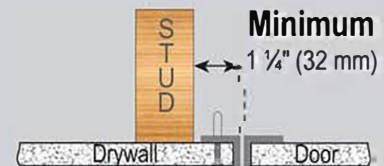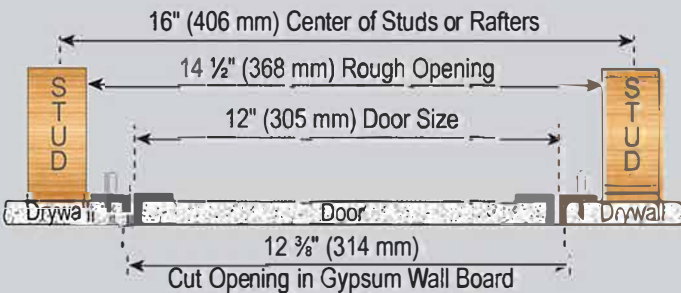

Call toll free World Wide.

Phone: 1-800-483-0823

Fax: 1-888-828-6021

Email: sales@bestaccessdoors.com

Website: www.bestaccessdoors.com

P.O. Box 4668, #76520 New York, NY 10163-4668